

Connect Nook Color and Nook Tablet to Wireless

1. Have your wireless network name, or SSID, and wireless network key available.
2. Turn on the Nook and press the Nook button
3. Tap settings in the Quick Nav bar
4. Under Device Settings tap **Wireless**
5. Make sure Wi-Fi is set to **On**. If not, tap **Off** to enable Wi-Fi
6. Wireless networks will show the available wireless networks
7. Tap wireless network name, or SSID, you would like to join and tap **Connect**
8. Enter the wireless network key, or password, and tap **Connect**
9. "Connected to the Internet" will display beneath the wireless network name once connected
10. Press the Nook button to return to the home screen