


Connect Samsung Smart TV to Wireless

Wireless Connection

1. Press **Menu** on your remote and scroll to **Network**

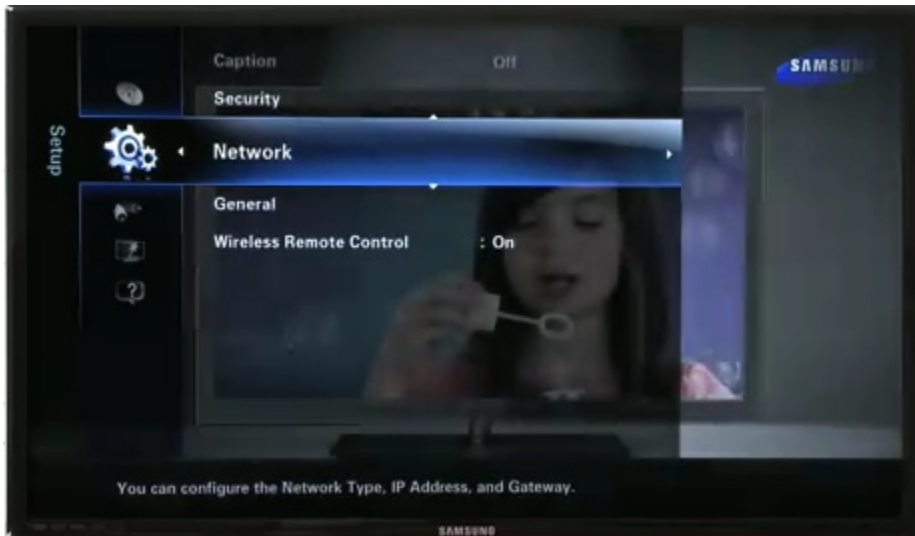


2. Set the **Network Type** to **Wireless**



3. Select **Network Setup**



4. Select **Select a Network**

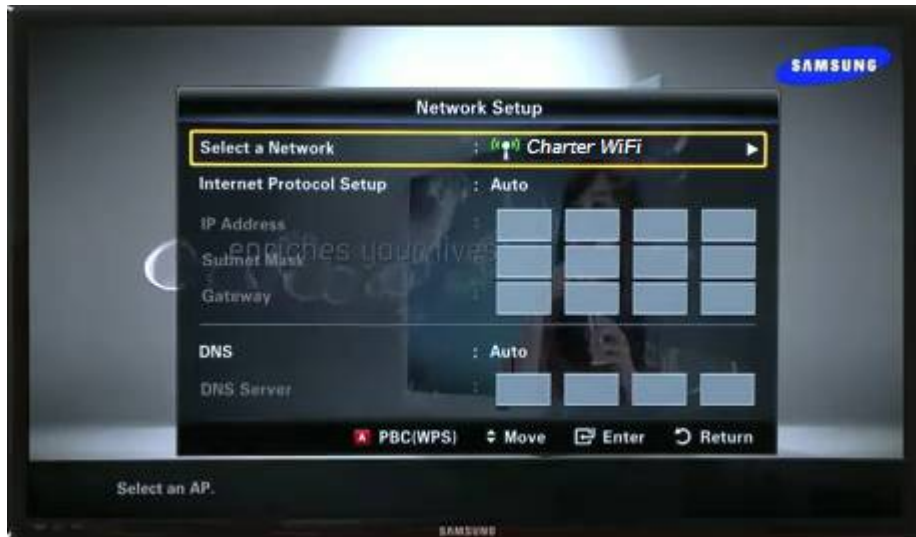

5. Select your Network Name



6. Enter your WiFi password and press the Blue button on your **Samsung** remote



7. Your Samsung TV will attempt to connect to your Charter WiFi



8. When you are connected select **OK**



Note: You may need to power your TV off and on again for changes to take effect